

MAINTENANCE

MAINTENANCE SCHEDULE

Perform the Pre-ride inspection in the Owner's Manual at each scheduled maintenance period.

I: Inspect and Clean, Adjust, Lubricate or Replace if necessary. C: Clean. R: Replace. A: Adjust. L: Lubricate.

The following items require some mechanical knowledge. Certain items (particularly those marked * and **) may require more technical information and tools. Consult an authorized Honda dealer.

| ITEMS | FREQUENCY | WHICHEVER COMES FIRST ↓ | ODOMETER READING (NOTE 1) ↗ | | | | | | | | REFER TO PAGE | | |
|---------------------------------------|-----------|-------------------------------|--------------------------------|-----|----|-----|-----|-----|-----|--|---|---|------|
| | | | X1,000 mi | 0.6 | 4 | 8 | 12 | 16 | 20 | 24 | | | |
| | | | X100 km | 10 | 64 | 128 | 192 | 256 | 320 | 384 | | | |
| * FUEL LINE | | | | | I | | I | | I | 4-5 | | | |
| * THROTTLE OPERATION | | | | | I | | I | | I | 4-10 | | | |
| * AIR CLEANER | | NOTE2 | | | | | I | | I | 4-10 | | | |
| * SPARK PLUG | | | | | | | | | | EVERY 16,000 mi (25,600 km) I, EVERY 32,000 mi (51,200 km) R 4-11 | | | |
| * VALVE CLEARANCE | | | | | | | | | I | 4-18 | | | |
| ENGINE OIL | | | | | | | | | | INITIAL = 600 mi (1,000 km) or 1 month: R, REGULAR = EVERY 8,000 mi (12,800 km) or 12 months: R 4-23 | | | |
| ENGINE OIL FILTER | | | | | | | | | R | R | 4-23 | | |
| RADIATOR COOLANT | | NOTE4 | | | | | | | | R | 4-26 | | |
| * COOLING SYSTEM | | | | | | | | | | I | 4-26 | | |
| * SECONDARY AIR SUPPLY SYSTEM | | | | | | | | | | I | 4-27 | | |
| * EVAPORATIVE EMISSION CONTROL SYSTEM | | NOTE3 | | | | | | | I | | 4-28 | | |
| ** EGCV CABLE | | | | | | | | | | | '07, '08 model 4-28 After '08 model 4-30 | | |
| DRIVE CHAIN | | | | | | | | | | | EVERY 500 mi (800 km) I, L 4-32 | | |
| BRAKE FLUID | | NOTE4 | | | | | | | | I | I | R | 4-37 |
| BRAKE PADS WEAR | | | | | | | | | | I | I | I | 4-38 |
| BRAKE SYSTEM | | | | | | | | | | I | | I | 4-39 |
| * BRAKE LIGHT SWITCH | | | | | | | | | | | | I | 4-40 |
| * HEADLIGHT AIM | | | | | | | | | | | | I | 4-40 |
| CLUTCH SYSTEM | | | | | | | | | | I | I | I | 4-40 |
| SIDESTAND | | | | | | | | | | | | I | 4-41 |
| * SUSPENSION | | | | | | | | | | | | I | 4-41 |
| * NUTS, BOLTS, FASTENERS | | | | | | | | | | I | | I | 4-44 |
| ** WHEELS/TIRES | | | | | | | | | | | | I | 4-45 |
| ** STEERING HEAD BEARINGS | | | | | | | | | | I | | I | 4-46 |

* Should be serviced by an authorized Honda dealer, unless the owner has proper tools and service data and is mechanically qualified.

** In the interest of safety, we recommended these items be serviced only by an authorized Honda dealer

NOTES:

- At higher odometer readings, repeat at the frequency interval established here.
- Service more frequently when riding in unusually wet or dusty areas.
- California type only.
- Replace every 2 years, or at indicated odometer interval, whichever comes first. Replacement requires mechanical skill.