

PERIODIC MAINTENANCE SCHEDULE

The chart below lists the recommended intervals for all the required periodic service work necessary to keep the vehicle operating at peak performance and economy. Maintenance intervals are expressed in terms of months.

NOTE:

More frequent servicing may be performed on vehicles that are use under severe conditions.

PERIODIC MAINTENANCE CHART

Item	Interval	Initial 1 month	Every 3 months	Every 6 months
Air cleaner element		—	C	C
Exhaust pipe nuts and muffler bolts		T	T	T
Valve clearance		I	—	I
Spark plug		—	—	I
	Replace every 18 months.			
Spark arrester		—	—	C
Idle speed		I	I	I
Throttle cable play		I	I	I
Throttle body		—	I	I
Fuel line		—	I	I
	Replace every 4 years.			
Fuel filter		Replace every 4 years.		
Engine oil and oil filter		R	—	R
Engine oil hose		I	I	I
Clutch cable play		I	I	I
Engine coolant		Replace every 2 years.		
Radiator		—	I	I
Radiator hose		—	—	I
Drive chain		Clean, lubricate and inspect each time the vehicle is ridden.		
Drive chain buffer		Inspect each time the vehicle is ridden.		
Brakes		I	I	I
Brakes fluid		—	I	I
	Replace every 2 years.			
Brake hose		—	—	I
	Replace every 4 years.			
Tires		—	I	I
Suspensions		—	—	I
Front and rear wheel set nuts		Tighten each time the vehicle is ridden.		
Rear axle nut and lock-nut		T	T	T
Steering		I	I	I
Chassis bolts and nuts		T	T	T
General lubrications		L	L	L

NOTE:

I = Inspect and adjust, clean, lubricate, or replace as necessary.

R = Replace C = Clean

T = Tighten L = Lubricate